

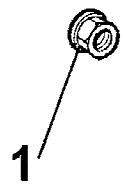
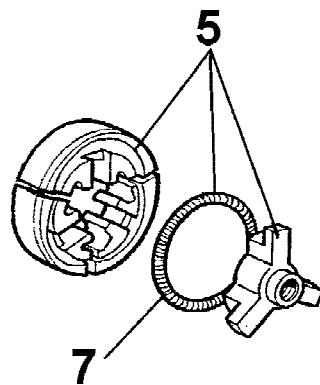



Ref #	Part Number	Qty	Description
1	50050037		FILTER COVER
2	50050034		KNOB
3	50050036		AIR FILTER
4	50050056		GASKET
5	50050035		SUPPORT
6	3960057		SCREW
7	2317021		SWITCH
8	3933100		NUT
9	50050026		STARTER LEVER
10	50060013		CAP
11	50050011		CARBURETOR
12	50050121		SCREW GUIDE
13	50050044		THROTTLE ROD
14	50050043		KNOB
15	50050070		TUBE
16	094600450		FUEL FILTER

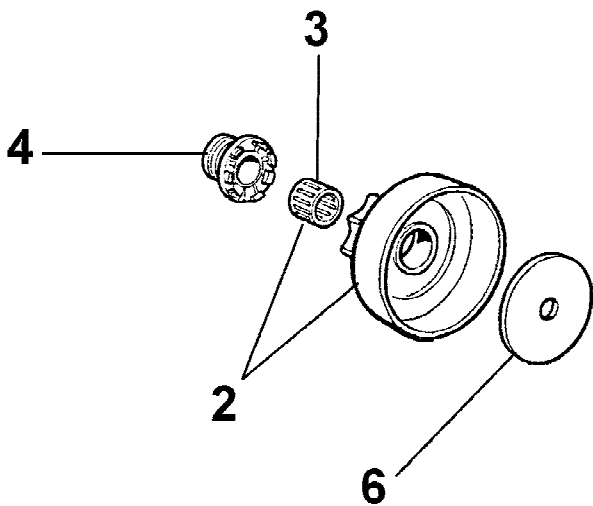

Ref #	Part Number	Qty	Description
1	094600148		SPRING
2	074000240		SCREW
3	095000141		SHUTTER
4	003300209		SCREW
5	094600208		SPRING
6	50050112		SHAFT
7	035000165		SPRING
8	50050104		SCREW "L"
9	50050105		SCREW "H"
10	093500115		SPRING
11	035000162		SCREW
12	2318191		COVER
13	003300202		SCREW
14	003300201		PIN
15	50050115		SPRING
16	094600209		REPAIR KIT
17	50050111		LEVER
18	50050109		BUSHING
19	003300036		FITTING
20	50050107		COVER
21	003300197		SCREW
22	094600210		DIAPH.+GASK.
23	50050011		CARBURETOR
24	094600140		SHUTTER
25	50050117		SCREW
26	50050113		SHAFT
27	50050110		BUSHING
28	50050108		LEVER


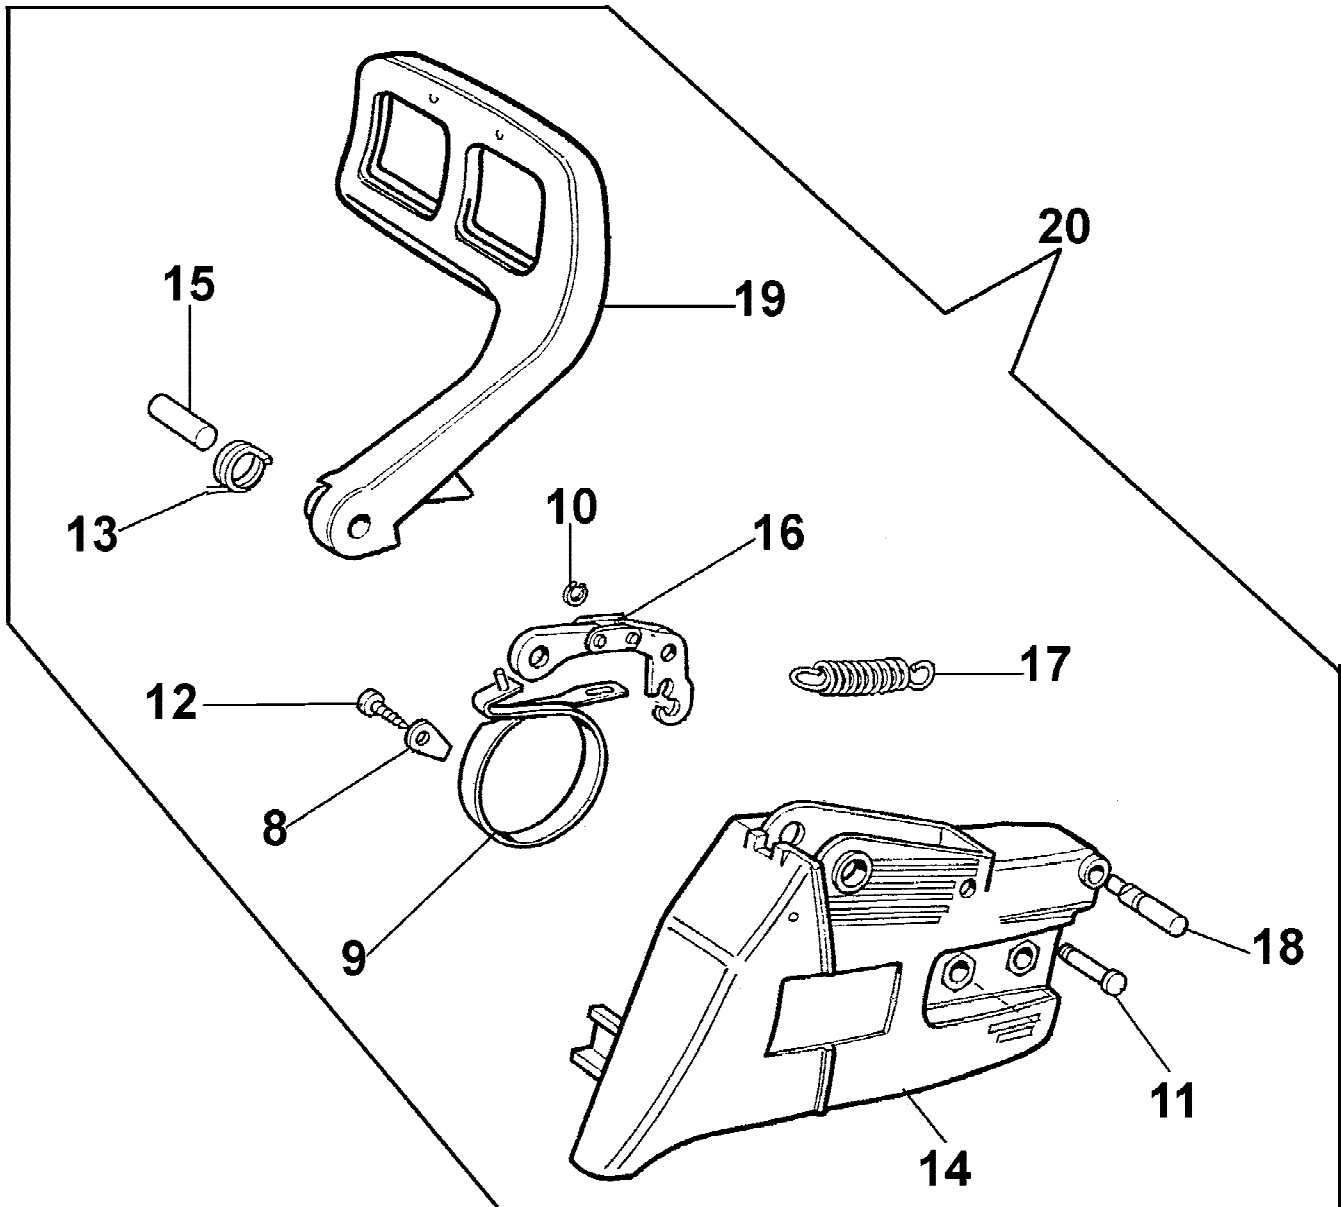


Ref #	Part Number	Qty	Description
1	50010148		NUT
2	50050136		DRUM ASSY
2	50060033		DRUM ASSY .325
3	50030089		BEARING
4	50060008		WORM GEAR .325
4	50050025		WORM GEAR 3/8
5	094000129		CLUTCH
6	004000352		WASHER
7	094500029		SPRING
8	50050125		PLATE
9	50050039		BRAKE BAND
10	3026003		CIRCLIP
11	097000106		PIN
12	3960070		SCREW
13	50010088A		SPRING
14	50050038		CHAIN COVER
15	50050066		PIN
16	097000146		LEVER
17	095000219		SPRING
18	50050064		PIN
19	50050040		GUARD
20	50052002		CHAIN COVER CPL

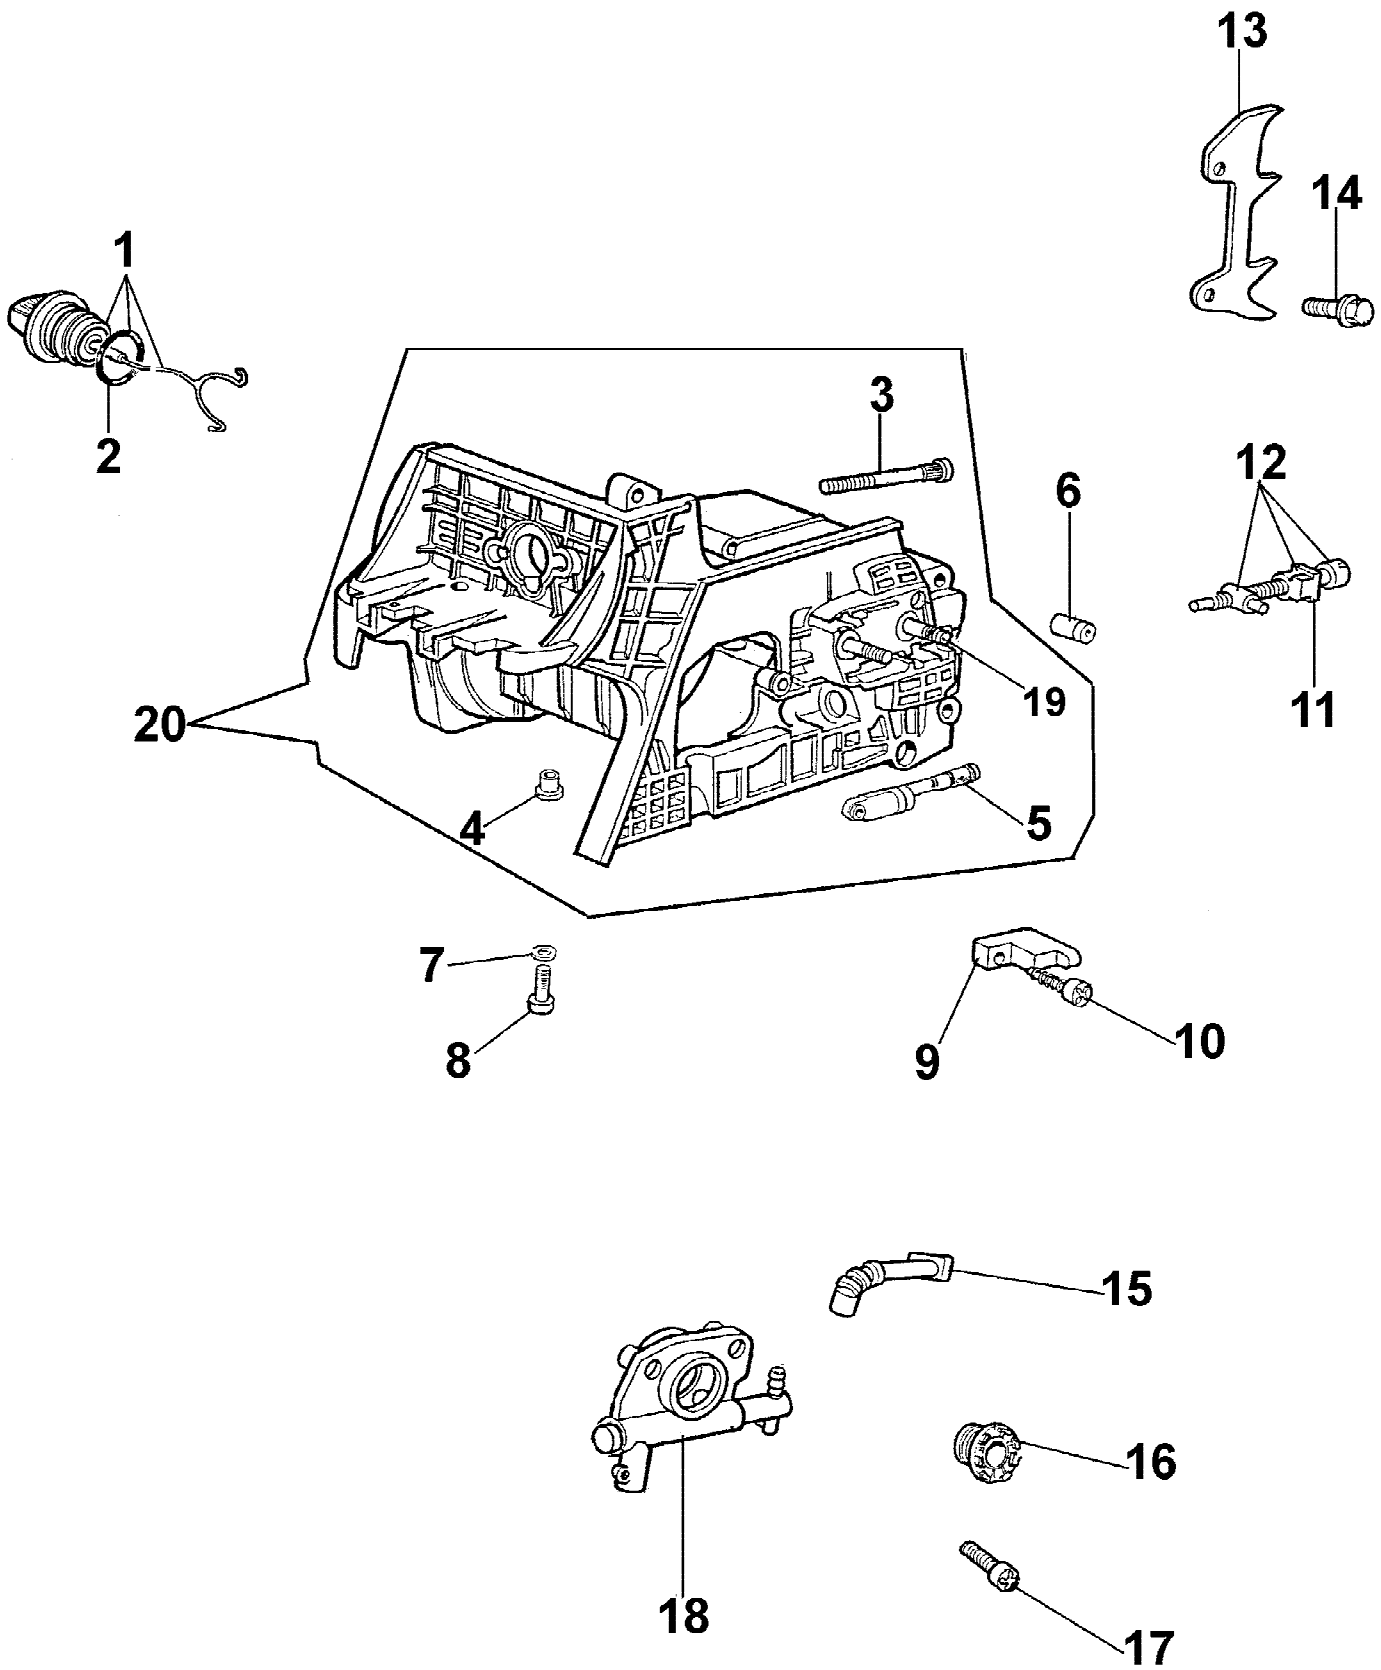


Ref #	Part Number	Qty	Description
1	50052005		COMPL. CAP
2	3049025		O-RING
3	094600262		SCREW
4	50050067		SPACER
5	50052006		OIL FILTER
6	097000229		TANK BREATHER
7	3833073		WASHER
8	3801053		SCREW
9	094600369		CHAIN CATCHER
10	094600041		SCREW
11	50050033		SCREEN-LOCK
12	50050133		CHAIN TENSIONER
13	50050076		SPIKE
14	3960047		SCREW
15	50050049		TUBE
16	50050025		WORM GEAR 3/8
16	50060008		WORM GEAR .325
17	3960074		SCREW
18	50050020		OIL PUMP
19	50050052		BAR STUD
20	50050007		ENGINE BASE/TANK




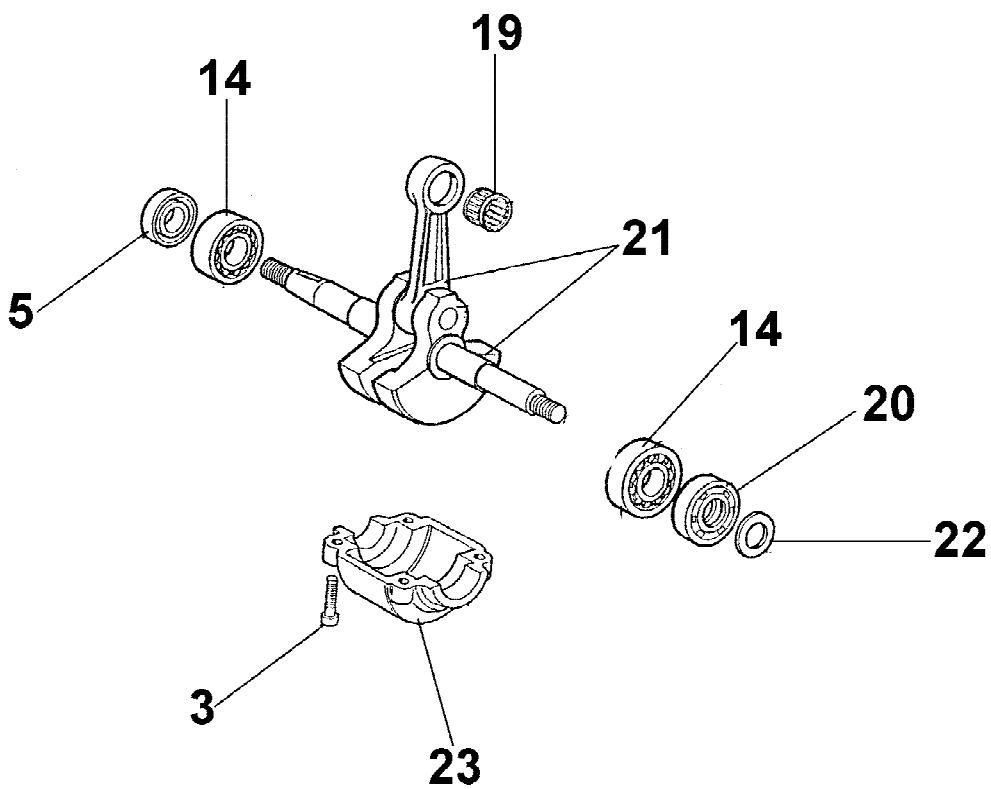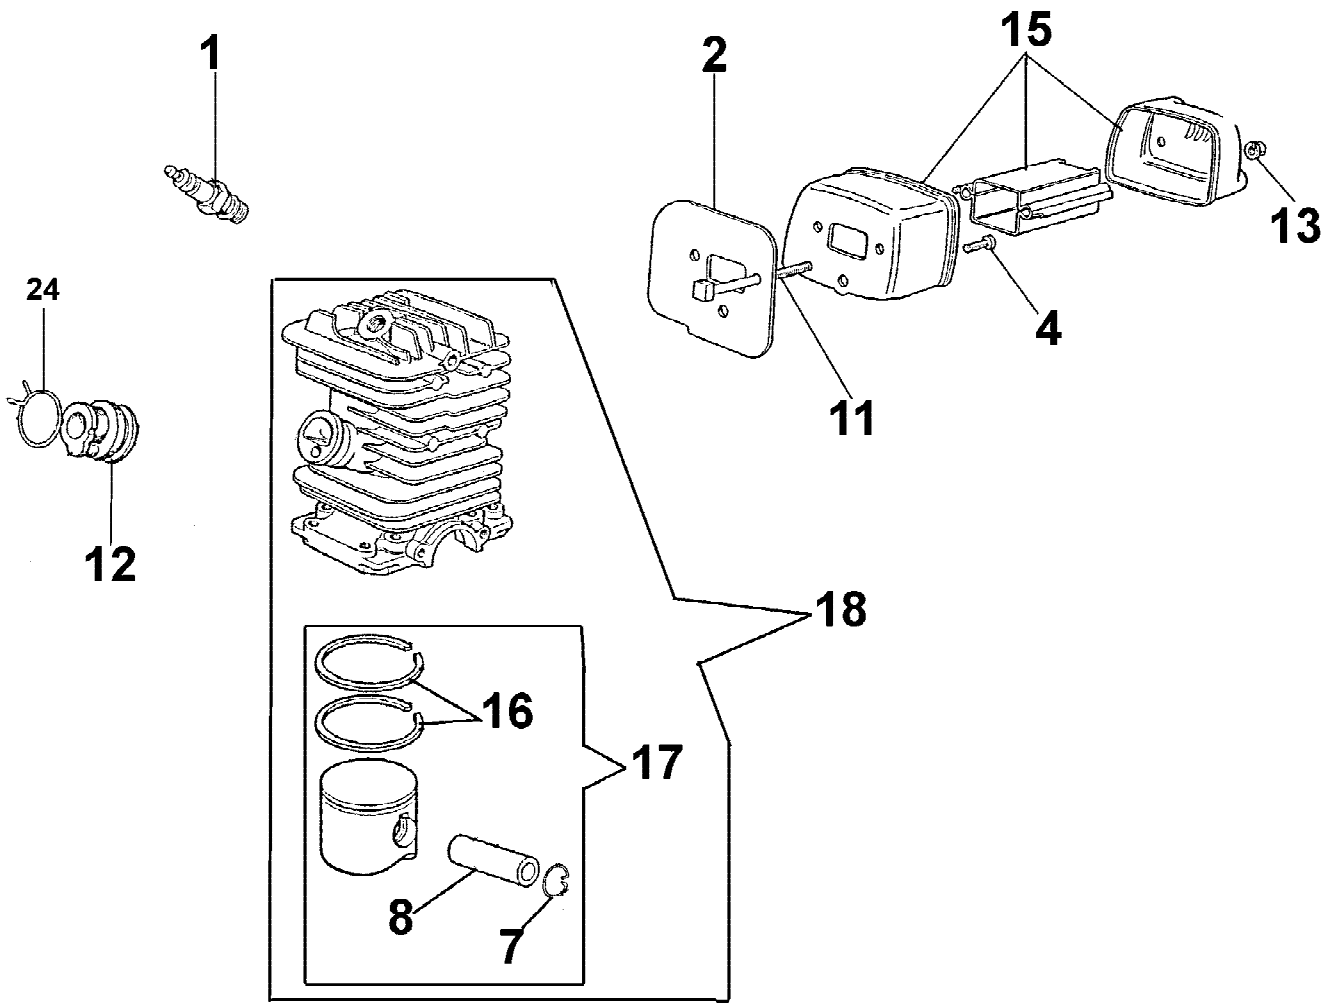

Ref #	Part Number	Qty	Description
1	005000019		SPARK PLUG
2	50050031		GASKET
3	3801047		SCREW
4	3960073		SCREW
5	3050022		SEAL RING
7	004900061		RING
8	50050222		PISTON PIN
11	50050032		SCREW
12	50050010		MANIFOLD
13	094600051		NUT
14	094000006		BEARING
15	50050027		MUFFLER
16	004000015		PISTON RING ⅓40
17	50060027A		PISTON ASSY ⅓40
18	50060028A		CYLINDER ASSY ⅓40
19	3037013		BEARING
20	3050024		SEAL RING
21	50050001		CRANKSHAFT
22	004400285		WASHER
23	50050016		COVER
24	094600103		SPRING

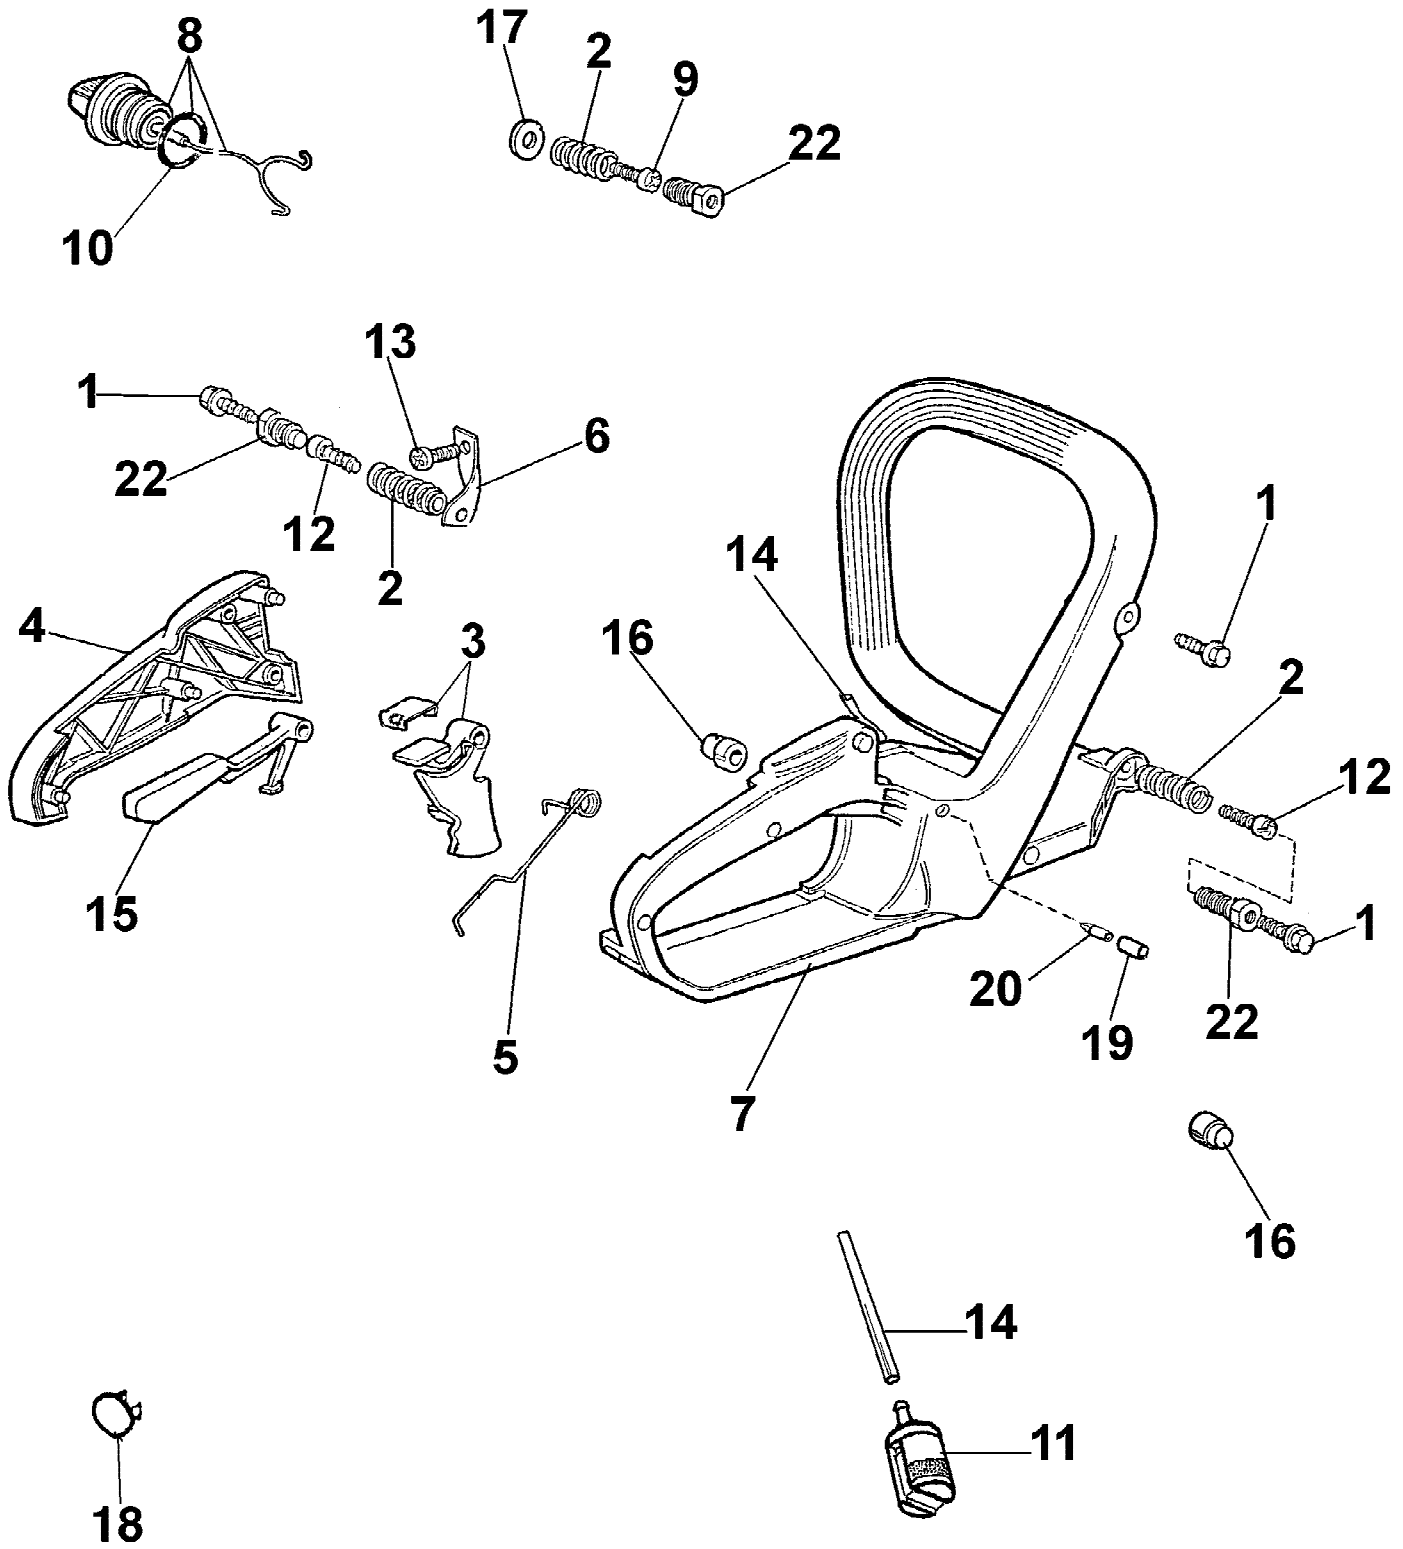

Ref #	Part Number	Qty	Description
1	097000061A		SCREW
2	50050047		SPRING
3	50050045		THROTTLE LEVER
4	50050024A		HANDLE COVER
5	097000028		SPRING
6	50050123		STOPPER
7	50050216		HANDLE AND TANK
8	50052005		COMPL. CAP
9	3960073		SCREW
10	3049025		O-RING
11	094600450		FUEL FILTER
12	094600041		SCREW
13	3960070		SCREW
14	50050070		TUBE
15	50050046		LEVER
16	50010061		SHOCK ABSORBER
17	3918010		WASHER
18	50050119		PLATE
19	50050071		TANK BREATHER
20	094500577A		TANK BREATHER
22	50050051		SUPPORT
24	50050072		CAP

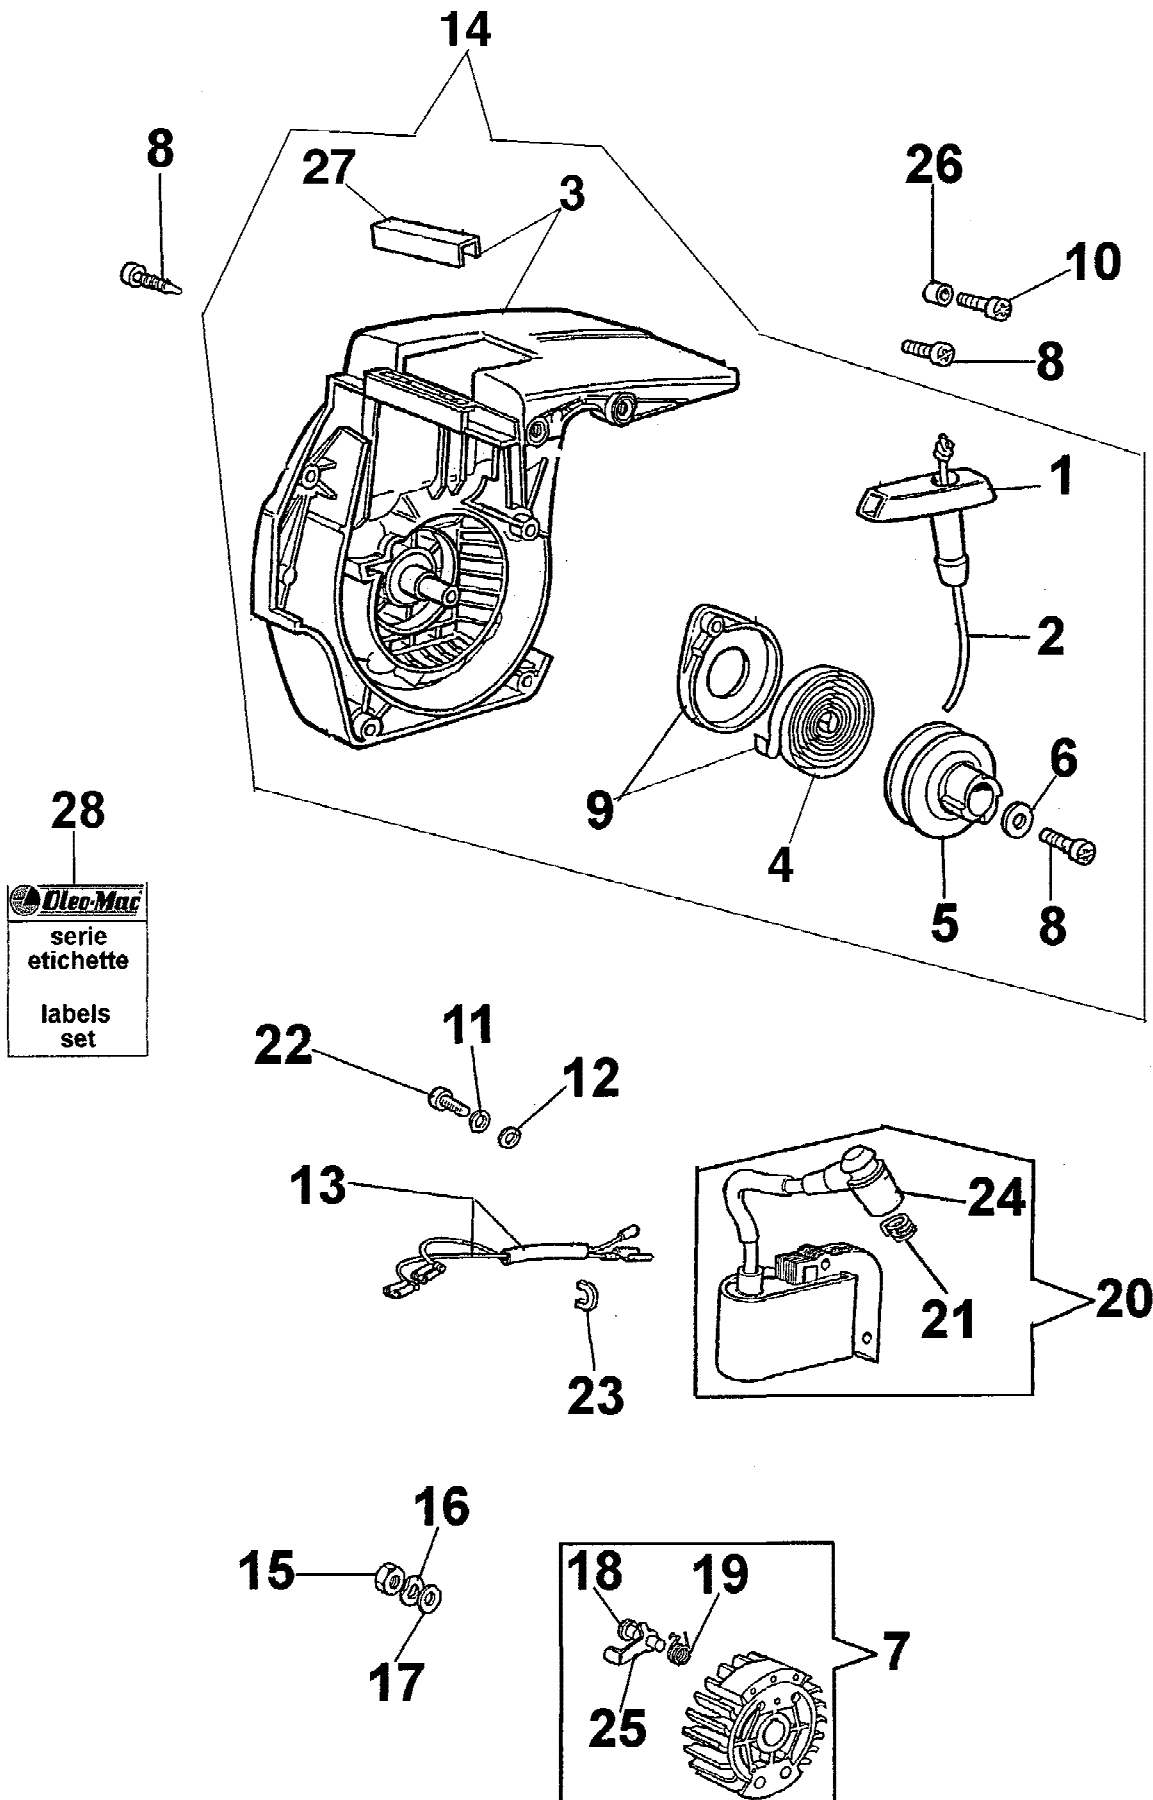

Ref #	Part Number	Qty	Description
1	097000064A		HANDLE
2	50070123		STARTER ROPE
3	50050041		STARTER CASE
4	004000132		SPRING
5	50050017		PULLEY
6	094500034		WASHER
7	50050015		FLYWHEEL
8	3960057		SCREW
9	50050073		SPRING and CASE
10	3960082		SCREW
11	006000315		WASHER
12	3916004		WASHER
13	50050081		CABLE
14	50052001A		STARTER ASSY
15	004000142		NUT
16	3833080		WASHER
17	005000361		WASHER
18	4161151		PIN
19	50050054		SPRING
20	50050013		IGNITION COIL
21	50050127		SPRING
22	3960075		SCREW
23	005000347A		GROMMET
24	50050126		SPARK PLUG CAP
25	50050053		PAWL
26	50050124		SPACER
27	50050120		PLATE
28	50060031		LABEL SET 940